

# WORR GAME PRODUCTS. Worrfram E OWNERS MANUAL

WARNING: This is not a toy. Misuse may cause serious injury or death. Eye protection designed specifically for paintball must be worn by the user and persons within range. Recommend 18 years or older to purchase. 14 years old to use with adult supervision or 10 years old to use on paintball fields meeting ASTM-standard F1777-02. READ OPERATION

WARNING: Never shoot at anyone without proper protective equipment for eyes, ears, throat and head, which must be worn at all times. Eye protection must be designed specifically for paintball use. Failure to follow these safety precautions may result in bodily injury including blindness and deafness.



If you have a problem, **DO NOT RETURN TO PLACE OF PURCHASE**. Contact WGP for service. Do not return to WGP without an RMA number.

Installation should only be done (if required) by a trained paintball marker tech.

WORR GAME PRODUCTS. 252 Granite Street Corona, Ca 92879-1283 Tel: (951) 520-9969

Toll Free: (800) 755-5061 www.worr.com, www.wgppress.com © Copyright 2005 WGP LLC., All rights reserved.

Welcome to the world of the Electronic Cocker® marker, and thank you for your purchase of a new WorrframE. You will now be able to experience paintball at its highest level

# Table of Contents

I.	Rules of Safe Paintball Marker Handling
II.	Preparing for Usage
III.	Cleaning Your Marker
IV.	Notes
V.	Troubleshooting
VI.	F.A.Q.
VII	Warranty

Colors and parts may vary from illustrations. Worr Game Products reserves the right to change parts at any time. Worr Game Products, Autococker®, Cocker® and the WGP® Paintball logo are all registered to WGP LLC. ©2005 WGP LLC.

### I. Rules of Safe Paintball Marker Handling.

Your WorrframE is not a toy. 18 years old to purchase. 14 years old to play with adult supervision or 10 years old to use on paintball fields meeting ASTM-standard F1777-02. Respect other peoples' property and when using this product, obey all local, state and federal laws. When entering a paintball field, become aware of their rules and regulations. It is very important to have the proper paintball protection before going to the paintball field for play. This includes and is not limited to eye, head, throat, and body protection. All protection used should be designed for the sport of paintball, e.g.: eye gear designed specifically for paintball usage.

Always have a barrel blocking device or barrel sock in place and keep the safety ON or frame turned off when handling your marker. When repairing or cleaning your marker first remove barrel and gas cylinder, then depressurize your marker by pointing in safe direction and dry-firing. Always treat the paintball marker as if it were loaded. When handling the marker, always keep your fingers or any other objects away from the trigger assembly to avoid accidental discharges. Make sure when carrying or transporting the marker, to keep the muzzle pointed downward with a barrel blocking device in place. Before transporting your marker through public areas, such as airports, or bus and trains stations, call ahead for regulatory information regarding the carrying and transporting of such an item.

Remember, the Autococker<sup>®</sup> marker should never be pointed or fired at anyone without the proper paintball approved eye and face protection, and should only be used at a supervised, licensed and insured paintball fields.

Note: A safe environment is an area where you and everyone within 200 yards is wearing paintball approved safety goggles and equipment. Game area should be within a netted area and meet ASTM-standard F1777-02.

### I. Rules of Safe Paintball Marker Handling.

- · Treat every marker as if it were loaded.
- · Never look down the barrel of a paintball marker.
- · Keep your finger off the trigger until ready to shoot.
- · Never shoot a person not wearing proper protection.
- Never point the marker at anything you don't wish to shoot, even if it is not loaded and there is no air source attached
- · Keep the marker on safe until ready to shoot.
- · Keep the barrel blocking device in/on the marker when not shooting.
- · Always remove paintballs and propellant source before disassembly.
- After removing propellant source, point marker in safe direction and discharge until marker is degassed.
- Store the marker unloaded and degassed in a secure place.
- Follow warnings listed on propellant source for handling and storage.
- · Do not shoot at fragile objects such as windows.
- Every person within range must wear eye, face and ear protection designed specifically to stop paintballs.
- Always measure your marker's velocity before playing paintball and never shoot at velocities in excess of 300 feet per second.
- · Never engage in vandalism.
- · Do not modify your markers air system or regulators in any way.
- · Do not use any paintball marker for drive-by shootings.
- Faliure to follow these safety precautions may result in bodily injury including blindness and death.

- 1. Screw barrel onto marker
- 2. Place barrel blocking device properly onto the marker

WARNING: Always wear paintball approved eye and face protection

when dealing with a pressurized paintball marker.


- 3. Pull the cocking rod back until it latches into place
- 4. Make sure your barrel blocking device is secured to the marker.
- 5. Connect the tank to the ASA (air system adapter.)

Note: Make sure to always get your cylinders filled by authorized, skilled and knowledgeable technicians for the correct fill limits of each cylinder. Do not try to refill cylinders by yourself. Do not use cylinders that have not been properly maintained or that are damaged. WGP recomends compressed air. Always be sure to only use ASTM compliant tanks for your marker. Always use caution when refilling, attaching and handling any type of air tank.

6. Attach the loader to the feed port of the marker

Note: Use only 0.68 caliber paintballs in your Worr Game Products Autococker<sup>®</sup> marker. All WGP Autococker<sup>®</sup> markers are timed and tested prior to leaving the factory.

Before field use, ensure the velocity is in compliance with field safety guidelines. General field velocity limits are usually between 250-300 fps (feet per second). Your paintball markers velocity should never exceed 300 fps. Observe and abide by all local laws, regulations and field safety guidelines pertaining to the use of paintball markers.

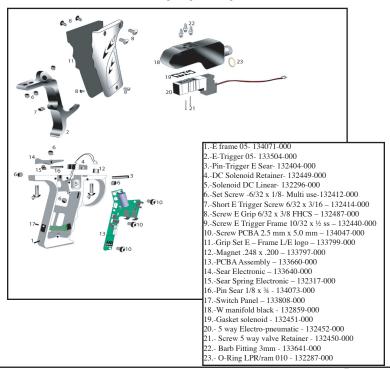



Do not put any part of your body directly in back of the cocking block when you activate the trigger.

Note:

WGP suggests the use of compressed air when shooting rapidly or in cold weather.

Note:

Do not return to WGP without calling and getting an RMA number first.

- Paintball industry approved protective gear (for face and eyes) must be worn at all times while operating and performing adjustments on this marker.
- Do not insert objects into the space between the cocking block and the main body of the marker at any point in time. Improper marker treatment may result in damage to the marker and serious injury to the operator.
- Prior to beginning any work on your marker, check to make sure that all excess
  pressure has been released by pointing the marker in a safe direction and
  pulling the trigger. This is a necessary precaution due to the fact that the
  marker may still contain pressure even after the removal of the gas source.
- Damages to the marker due to improper adjustments are NOT covered under warranty. If you are uncertain, unable or do not know how to perform work on the marker, have adjustments and repairs made by WGP.


### III. Velocity

 **Always use a chronograph to verify that your marker's velocity does not exceed maximum safety limits.** 

### II. Preparing for Usage

Note: Installation should only be performed by a qualified paintball marker tech.

The WGP WorrframE requires a 9 volt battery. (Not Included)




#### Installation:

Remove the three screws on the right hand grip panel.

Install a 9 volt battery (not included) with the positive (+) terminal on the battery matched to the positive (+) terminal on the board. The (+) terminal will be on the right side when installing the battery.

Reinstall the screws and the grip panels.

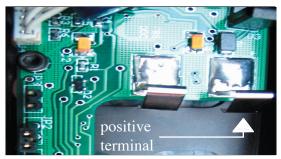

II. Preparing for Usage



Note: The WGP WorrframE is controlled by only one button, located on the rear of the grip frame.

After proper installation of the 9 volt battery, depress the button to turn on the marker.




When the "W" flashes red, the eye has not detected a ball so the eye will turn itself off.

If the eye detected a ball, it will continue flashing yellow.

Your WGP WorrframE features Intelligent Eye Operation, I.E.O.

Intelligent Eye Operation turns the eye off automatically if no paint is detected in the breech. The eye will remain in the "off" mode (allowing you to still fire) unless firing is stopped. When the continuous firing ceases, the eye will automatically restart to see if a paintball is present once more in the breech.

If during play your eye becomes dirty or stops working for some reason, your marker will automatically shut the eye off and adjust the settings automatically so you will have less chance of ball breakage.

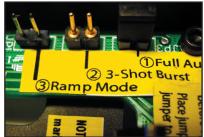

Jumpers and how they work:

you will notice that your WorrfamE only came with one black jump connector. Your WorrframE has 4 different fire modes and a demo mode.

- 1. semi auto- no jumper in place
- 2. full auto- only top jumper in place
- 3. 3 shot burst- only middle jumper in place
- 4. ramp mode- only bottom jumper in place

The flashing lights will indicate what mode you are in and let you know whether the eye is on or off and also if your in Demo mode.

Table-1

FIRE MODE	LIGHT WITH EYE ON		LIGHT IN DEMO MODE
SEMI AUTO MODE	1 slow yellow flash	1 slow red flash	constant flash red to yellow
FULL AUTO MODE	constant yellow flashes	constant red flashes	constant flash red to yellow
RAMP MODE	2 quick yellow flashes	2 quick red flashes	constant flash red to yellow
3 SHOT BURST MODE	3 quick yellow flashes	3 quick red flashes	constant flash red to yellow

The WGP WorrframE also features Intelligent Battery Monitoring. Intelligent Battery Monitoring has two features.

The first will tell you your battery is low by blinking alternate yellow/red flashes. The second feature automatically turns the marker off after 30 minutes of inactivity.

	Maximum balls per second	Maximum balls per second	Maximum balls per second
FIRE MODE	BPS EYE ON	BPS EYE OFF (Set to minimize ball chopping)	BPS DEMO MODE (cycling back block not firing)
Semi auto mode	20+	varies per loader	20+
Full auto mode	20+	varies per loader	20+
Ramp mode	15	varies per loader	15
3 shot burst mode	20+	varies per loader	20+

Note: Never change jumper position without removing the battery first.

Note: WGP suggests the use of compressed air when shooting Electronic markers.

Note: A qualified technician should make all repairs and adjustments.

If you would like to turn your eye off while the marker is on, push and hold the power switch until the light is solid yellow then immediately release, your eye is now off, and the light will now flash red.

In the eye off mode you can access the Demo Mode by quickly pushing the power switch, you will know your in demo mode because the light on the button will have a constant flash of red to yellow.

### III. Cleaning Your Marker

WARNING: Always make sure you and everyone around you wears face, eye and ear protection when you clean the marker or check it for paintballs.

It isn't necessary to completely disassemble your marker to clean it. WGP recommends the following cleaning be done after each day of play:

- 1. Before you start ALWAYS make sure that all paintballs are out of the marker.
- Remove air source and ensure that all air has been released from the marker
- 3. Remove the barrel sock and then remove the barrel.
- 4. Lightly spray marker down with a 50-50 mix of rubbing alcohol and water and then wipe down.
- 5. Wipe down the marker with a clean cloth, or blow off the marker with compressed air (NOT CO<sub>2</sub>).
- Remove bolt and lubricate bolt O-rings with petroleum jelly or lithium grease, then reinstall.
- 7. Lubricate all moving parts with Vaseline, and reassemble.
- 8. WGP recommends that after every 4-5 days of play you place 3-4 drops of 3 in 1 or other paintball marker specific oil in the air receiver and fire the marker 10-15 times without the barrel. This will distribute the oil throughout the marker and lubricate the internals.

Factory approved lubricants:

- · Petroleum Jelly
- · Lithium Grease


### IV. Notes

### V. Troubleshooting

Note:

A qualified technician should make all repairs and adjustments. Do not attempt to perform any factory-only repairs. Call WGP for any service needed on your marker. Any damage caused by improper adjustments is not covered by the warranty.


- 1. Marker will not fire properly after removing and replacing bolt.
  - Bolt installed upside down. Remove bolt. Reinstall after rotating 180 degrees. The hole side should be facing down.

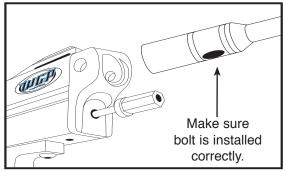

- 2. Marker will not fire when trigger is pulled.
  - Gas source pressure low or tank empty. Fill tank.
  - Make sure the hole in your bolt, between the 2 o-rings is facing down.
  - . Battery is dead or low, replace with new battery

### V. Troubleshooting

- 3. Marker will not cock or cocks every other time or less.
  - · Pressure too low. Fill tank.
  - · Velocity adjustment set too high.
  - · Battery is dead or low, replace with new battery
- 4. Chops paintballs.
  - Make sure your cocking rod is screwed all the way in.
  - Paint is soft or swelled. Ensure that paint is not too large for barrel.
  - Check loader and breech for foreign matter.
  - •Check if eye is dirty, clean eye.

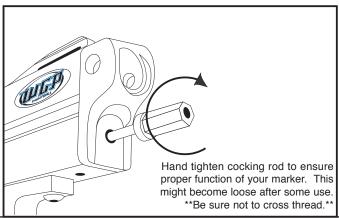

### V. Troubleshooting

- 5. Hose blows off.
  - Clip off worn tip and reinstall or call WGP for service 800-755-5061.
  - •LPR pressure set to high. Lower LPR pressure by turning knob.
- 6. Low velocity.
  - Bolt upside down.
  - Gas source pressure too low or tank empty. Fill tank.
  - Improper IVG adjustment. Adjust velocity.
  - Paint rolling down the barrel. Paint too small.
- 7. Leaking between tank valve and marker air-receiver.
  - Bad tank valve o-ring. Replace o-ring. This is the external o-ring at the top of the tank.



- 8. Low velocity.
  - Gas source pressure too low or tank empty. Fill tank.
  - Improper IVG adjustment. Adjust velocity.
  - Paint rolling down the barrel. Paint too small.
  - · Bolt upside down.

### VI. F.A.Q.

Q) How do I oil my marker?

A) 1.You only need to lubricate your marker after every 4 to 5 days of play. To oil your maker you first, in a safe environment, remove your loader, then fire all excess paintballs out of the marker. Next remove your tank and fire all excess air from the marker. Now remove your barrel. Next drop 3 to 4 drops of either 3 in 1 oil or any other approved paintball marker oil into the air receiver and safely fire the marker 10-15 times. This will distribute the oil throughout the internals of the marker. At this time you can also lubricate your bolt 0-rings. Be sure that the hole in between the 2 O-rings on your bolt is always facing down. Factory approved lubricants: Petroleum jelly and 3 in 1 oil..

Q) How do I safely clean my worrframe and eye?

A)To clean your worrframe you first find a safe environment then remove your loader, then fire all excess paintballs out of the marker. Next remove your tank and fire all excess air from the marker. Now remove your barrel, then lightly spray down marker with a 50-50 mix of rubbing alcohol and water and then wipe it down with a clean cloth. If there is any splatter or hits on the frame clean them up. Keep some q-tips around for hard to get spots and if paint got inside the frame they come in handy.

- Q) Does WGP recommend C02 or compressed air?
- A) WGP recommends compressed air.
- Q) I've removed my bolt and replaced it, and my velocity has dropped. What is the problem?

A) Any time your remove the bolt from your marker, you must always be sure that the hole in between the 2 O-rings on your bolt is always facing down before reinstallation. This is common problem that could directly effect the velocity of your marker.

### VII. 90 days Limited Warranty

WGP LLC. warrants that your WorrframE will be free from defects in materials and workmanship for 90 days from purchase date.

Any product determined by WGP to be defective in materials or workmanship in accordance with the above warranty will be repaired or replaced, at the option of WGP, free of charge when received at the factory freight prepaid, together with proof purchase. This warranty is expressly in lieu of all other warranties. Any implied warranties of merchantability or fitness for a particular purpose are limited to the same duration as this express warranty. This warranty does not cover incidental or consequential damages. WGP shall not be liable for any incidental or consequential damages. Some states do not allow the exclusion or limitation of implied warranties, incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty does not cover any problem resulting from misuse, abuse, neglect, alteration, failure to perform maintenance as instructed, unauthorized repair or service, or damage caused by contaminants. This warranty does not cover any representation or warranty made by Dealers beyond the provisions of this warranty. Non-warranty repairs may incur a repair charge. This warranty does not cover costs incurred for normal repair, inspection and preventive maintenance.

You must establish proof of purchase to obtain warranty service or replacement. You may establish proof of purchase by completing the Warranty Registration Card and mailing it to WGP. This warranty gives you specific legal rights, and you also have other rights which vary from state to state If you have any questions about your WGP product, please call us toll free at 1-800-755-5061 Warranty Service is available by sending your marker to:Worr Game Products. Attn: WARRANTY SERVICE 252 Granite St. Corona,

CA 92879 P: 951-520-9969 www.worr.com

You must call WGP LLC. to request an RMA number before sending in your product for warranty or tech mail in to Worr Game Products with your Reciept Please fill out Warranty Card on other side and service.

Attention Warranty Service	
Worr Game Products.	
Warranty Registration Card	
WorrframE REGISTRATION:	
Name	
Address	
City	
State Zip	Country
Phone	E-mail
Purchased Date	
Purchased From	
() Pro Shop () Internet () Field () S	Sporting Goods () Other
Please fill out this warranty card and receipt to WGP. Thank You	mail with a photocopy of your purchase
HowmuchdidyoupayforyourWorrfran	nE?
What painthall marker did shoot prior to	thismarker?
Howmany years have you been playing	gpaintball?
Whattyne of painthall do you play?	gpaintbail:
WhatmadevouchooseaWGPmarker3	?
What nainthall magazines do youread?	



# Worr Game Products

252 Granite Street Corona, CA 92879 U.S.A.

P: 951-520-9969 www.worr.com www.wgppress.com

P/N 141903-000