



INSTRUCTIONS FOR USE

The eForce marker is capable of high rates of fire and an agitating hopper such as a VL Revolution, Halo or Evolution 2 is recommended for better performance. An Evil Smokestack high rise is also recommended for vertical feed markers if you run into problems where your gun pinches or chops paint.



ON/OFF BUTTON: The on/off button is located on the left hand side of the marker. Push it once to turn your eForce on. Push it again and the frame will turn off. The frame should be left off when not playing with the gun or you will drain the battery.

BURST BUTTON: Press the Burst Button once to turn the gun on 3 Shot Burst. Press the Burst Button again to turn the frame to 6 Shot Burst. Press the Burst Button again to turn the frame to 9 Shot Burst. Press the Burst Button again to turn it back to semi-auto.

FULL AUTO BUTTON: Press the Full Button once to turn the frame to Full Auto. Press the Full Button again to turn it back to semi-auto.



COCK MARKER BEFORE AIRING UP: Cock the marker before airing it up. You must cock this gun first, due to low pressure valving, or it may leak down the barrel. Cock the gun by pulling the cocking rod in the back of the gun. Flush cocking rods (silver) will slide back into the gun.

SEAR RELEASE SLIDE: The sear release slide is located on the left hand side of the eForce grip frame. To reinstall the bolt/block/hammer assembly, push the sear release slide up before the hammer comes in contact with the sear. That will allow the bolt/block/hammer assembly to slide easily into the gun.



WARNING: Never use water to clean the gun, or you run the risk of the damaging electronic trigger frame.

E FORCE BATTERY: The eForce battery is a 9 volt rechargeable battery. The battery needs a full 22 hours to charge before it is full. The battery does not come fully charged. For best long term battery life, PMI recommends you charge your eForce frame for a full 22 hours before using it. You can use regular 9 volt batteries with this frame if your rechargeable battery is dead or you want to play with the frame right away. A blinking on/off indicator light means your eForce frame needs to be charged right away

TOURNAMENT LOCK SWITCH: There is a tournament lock switch if you want to play in a tournament or at a field that does not allow full auto and burst modes. The tournament lock switch will make your gun semi-automatic only. All eForce frames come with the tournament lock off so you can put the gun in full auto or burst mode. The tournament lock is located under the front of the board. To access the tournament lock, you have to take the eForce frame off the receiver and unscrew the two screws that hold the board in place. Once these are out, the front of the board can be lifted up and the black switch is right underneath.



WARNING: PMI RECOMMEND 9V RECHARGEABLE BATTERY FOR OPTIMAL PERFORMANCE. DO NOT USE THE BATTERY CHARGER WHEN USING ANY NON-RECHARGEABLE BATTERY.