

TROUBLESHOOTING GUIDE

Recommend 850psi Output Pressure for proper performance

How do I adjust the ROF(Rate of Fire) on my First Strike T15?

Insert the 5/64 Allen key into top adjustment hole and adjust clockwise(increase) and counterclockwise(decrease)

My T15 Will Only Shoot Semi Auto.

First, check to make sure your FA Module ROF(Rate of Fire) setting is set correctly. Insert 5/64 Allen Key into top of FA module and screw clockwise. This will increase your rate of fire, thus making the T15 shoot Fully Automatic. The second thing that could be happening is the re-cock port on the upper manifold is not set correctly. To adjust the re-cock, split the T15 and half and remove the upper manifold. Unscrew the upper manifold screw until it is halfway open.

My T15 Chops in Full Auto.

Your T15 could be chopping due to the ROF(Rate of Fire) being set too high. Try turning the ROF down. Your magazine could also be dirty, preventing it from feeding correctly. See T15 Product Manual for Magazine maintenance tips.

TECH NOTICE: ANY TAMPERING WITH THIS UNIT VOIDS YOUR WARRANTY. THERE ARE NO CONSUMER SERVICEABLE PARTS INSIDE THE DAMPER.

Thank you for purchasing the First Strike T15 FA Upgrade Kit. Like all paintball markers, please remove all air sources prior to servicing.

If you have any questions regarding this product or other First Strike Paintball products, please contact us.

FIRST STRIKE PAINTBALL

Headquarters:

28101 Ballard Dr. Ste. F
Lake Forest, IL 60045

Manufacturing/Warranty

2717 Ferguson Rd
Fort Wayne, IN 46809

→ 1-260-478-2500

→ service@first-strike.com

→ FIRST-STRIKE.COM

You must be at least 18 years of age to purchase this product. This product may be mistaken for a firearm by law enforcement officers or others. Altering the color of the product or brandishing the product in public may be dangerous and may be considered a crime.

⚠ WARNING! PAINTBALL GUNS AND PAINTBALL GUN ACCESSORIES ARE NOT TOYS!

- Careless use or misuse may result in serious bodily injury or death!
- Eye protection designed for paintball must be worn by the user and all persons within range.
- Not for sale to persons under 18 years of age.
- Must be 18 years of age or older to operate or handle any paintball gun and paintball gun accessories without adult or parental supervision.
- Read and understand all cautions, warnings, and operating manuals before using any paintball gun or paintball gun accessory.
- Do not aim paintball gun at eyes or head of people or at animals.
- Paintball guns are to be used with paintballs only.
- Use common sense and have fun.

Any tampering with the unit voids your warranty. There are no consumer serviceable parts inside the unit. The use of non factory authorized components within this product may cause a critical failure, fire or shock hazard.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE PRODUCT OR THE USE OF ANY PRODUCT.

WARNING: This product does contain chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm. Wash hands after handling. You must be at least 18 years of age to purchase this product. This product may be mistaken for a firearm by law enforcement officers or others. Altering the color of the product or brandishing the product in public may be considered a crime.




FIRST STRIKE

T15 F/A UPGRADE KIT

Item # 414-01-1830 | Rev 1216

First Strike is a brand of United Tactical Systems, LLC.

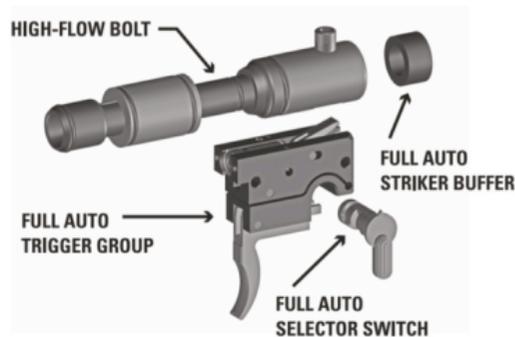

YOU WILL NEED THE FOLLOWING ITEMS:

- 5/64 Allen Key
- 7/32 Allen Key (for AR Grip Removal)
- Paintball Marker Oil(Like Gold Cup or Vitamin O)
- Included FA Kit Components

STEP 1. Remove all air sources from your T15 marker and make sure the T15 is free of any First Strike Rounds or Paintballs.

STEP 2. Split T15 by releasing the rear strip pin.



STEP 3. Remove old Bolt assembly and Striker Buffer. (fig 2)




STEP 4. Remove Selector Switch by pressing down on opposite side of Selector Switch. If selector switch does not pop out, remove AR grip by using 7/32 Allen Key. (fig 3)



STEP 5. Remove stock Semi-Auto Trigger group and for creating accessibility, remove Upper Manifold (fig 4)



STEP 6. Install High-Flow Bolt and new striker spring, and Full-Auto Striker Buffer (included in packaging) (fig 5)

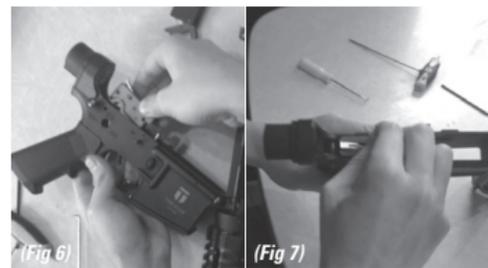

STEP 7. Place drops of oil in trigger group and on Sear, then install Full Auto Trigger Group. (fig 6)

STEP 8. Install Full Auto Selector Switch.

STEP 9. Reinstall AR Grip. (if removed during Step 4.)

STEP 10. Air up T15 and check for leaks. If no leaks, dry fire unit IN SEMI AUTOMATIC for 20-30 shots. Switch to FA and shoot an addition 40-50 shots in bursts.

STEP 11. After test firing, it might be necessary to adjust the ROF(Rate of Fire) by inserting 5/64 Allen Key into top of FA Module. Turn clockwise to increase rate of fire. Turn counterclockwise to decrease.(fig 7)